

Magnetic Flipchart Easel Board

USER MANUAL

BEFORE ASSEMBLY

When you unpack and prepare for assembly, please place the contents on a carpeted or padded area to protect them from damage.

BOX CONTENTS

1x Pre installed magnetic whiteboard

TIPS FOR USING THE WHITEBOARD

1. Please use good quality whiteboard markers (water-based). Oil-based markers and permanent markers are forbidden.
2. Please peel off the protective film from the writing surface before use. For your convenience, we've already cut a long the board frame. You just need to use your thumb or a knife to tear the film a little bit from the board corner and then take off the film step by step.
3. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Whiteboard cleaner would be more helpful to wipe off.

TOOL FOR ASSEMBLY

No tools required



Aluminum clamp
and Flipchart hooks



Leg protectors




Adjustable Knob for 360
rotating and height
adjusting



Marker tray

Adjust the knob to any desired angle and height

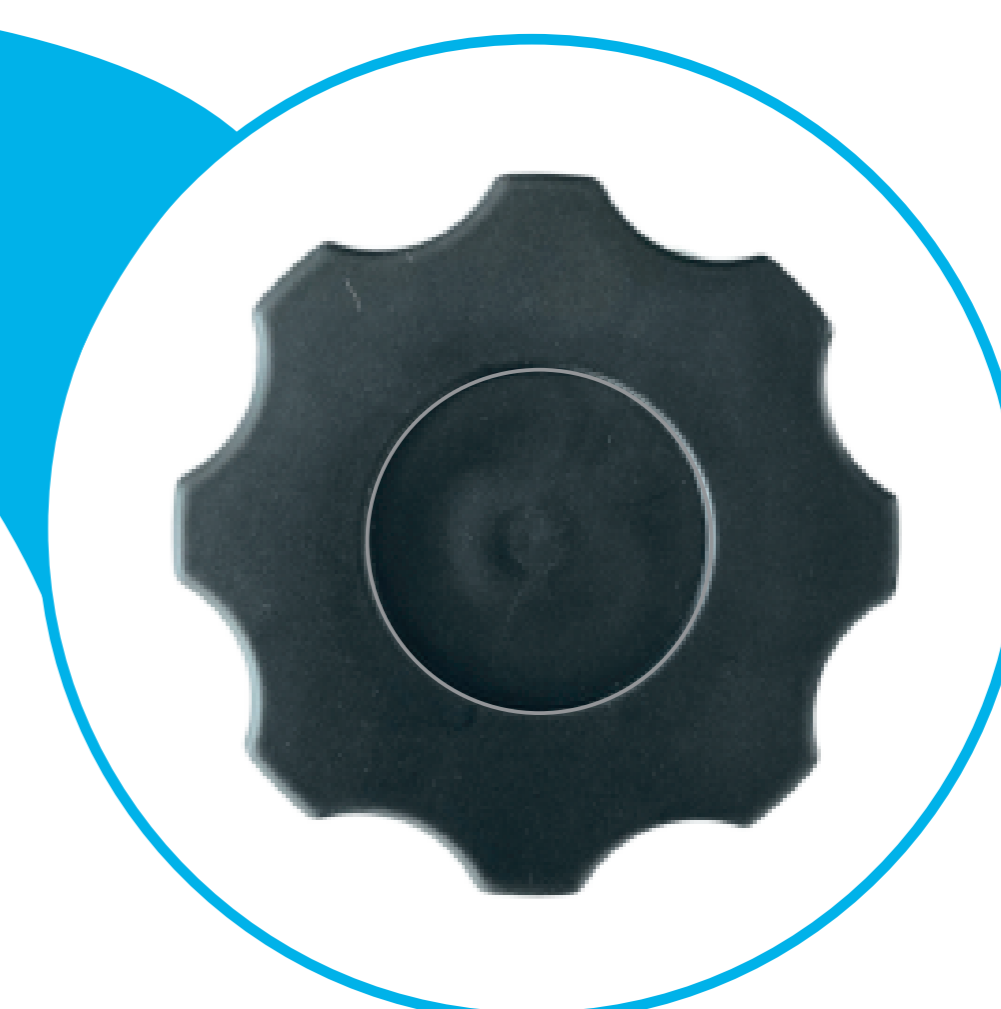

Height adjusting knob

- A. Two knobs ① have been installed on the easel in advance.
- B. Adjust the height or angle by loosening two height adjusting knobs ① to any desired position and tighten them, you can also adjust the height to the horizontal position and use the board as a desk.